

bose cd player instruction manual



File Name: bose cd player instruction manual.pdf

Size: 3822 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 18 May 2019, 13:29 PM

Rating: 4.6/5 from 705 votes.

Status: AVAILABLE

Last checked: 5 Minutes ago!

In order to read or download bose cd player instruction manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose cd player instruction manual . To get started finding bose cd player instruction manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

bose cd player instruction manual

Controlling the system. Using the radio. Reading the radio display. Using the CD player. Reading the CD display. Setting the alarms. Reading the alarm setup displays. Using the alarms. Fourteen years of research by Bose Corporation bring you the benefits of awardwinning patented acoustic waveguide speaker technology. Using this technology, a tube efficiently transfers energy from a small loudspeaker to the outside air over a whole range of bass notes. Save all packing materials for possible future use. If any part of the product appears damaged, do not attempt to use it. Operating without this battery leaves the memory unprotected, but will not harm the product. The FM antenna is built into the power cord. 2. Plug the power cord into an electric outlet Figure 3. The display panel lights and the time display begins flashing. Your remote control may be one of two types Figure 4A or 4B. Each is identified by the way the battery compartment unlocks to install or replace the battery. To play your radio or CD player through external speakers, connect powered speakers with an independent volume control to the systems R right and L left LINE OUT jacks. Audio cables for these connections are available at electronics stores. You may need a special adapter SuC h as a miniplug Stereo audio Cable fora TV With a headphone outlet. Use the remote buttons in the same way you use the system control panel. The system turns on to the last source played. To select a source Press FM or AM, CD, or AUX. To listen to a component connected to AUX, be sure to turn on the component. Pressing AUX does not turn on the component. The system turns on to the last source played. Or, press FM or AM or any Preset to turn the radio on. Place the CD, labelside up, on the spindle in the CD well. Gently lower the door more than halfway, until it begins to close by itself. Or continue to close it manually if you prefer. The system is now in alarm setup mode. ALARM 1 flashes for 10 seconds. <http://www.amerpol.com.pl/userfiles/colorspace-udma-manual-pdf.xml>

- **bose cd player instruction manual, bose radio cd player instruction manual, bose radio cd player user manual, bose wave radio cd player user manual, bose cd player instruction manual.**

To select which alarm to set While ALARM 1 is flashing, set alarm time, volume, and alarm. Press again to deactivate that alarm. Press Alarm 2 to activate this alarm; ALARM 2 lights on the display. Press again to deactivate that alarm. To remove stains or fingerprints from the surface of a disc, use a soft, lintfree, dry cloth. Please fill out the information section on the card and mail it to Bose. Page 4 Before you begin Setting Up. Before you begin Unpacking the carton Save all packing materials for possible future use. The original. Page 6 Installing the battery Setting Up. Installing the battery Connecting the power cord Setting up the remote control It may cause. Page 9 Setting Up Page 10 Connecting other components as an option Setting Up. Connecting other components as an option. Page 11 Setting Up Portable tape player One miniplug to Headphone jack. Using the remote control Figure 9 Lights when Alarm 1 is Flashes when Shows. Setting the time Controlling the system Using the radio. Using the CD player Place the CD, labelside up, . Setting the alarms Alarm 1 Using the alarms Alarm 1 Troubleshooting. Problem What to do. Page 24 Index Index Page 25 Index. P stereo tuner 4 Page 26 Notes. Color is graphite gray. Includes Bose Wave Radio Model AWRCC1, Wave Music System MultiCD Changer, original remote, manuals for both the radio and changer and also the update disc needed when new to link radio to changer, already done. All items will be. Just before packaging, but please. Due diligence and clean again after removing form packaging. Thanks for peekin', stay safe and good luck to all. The item "Minty BOSE AWRCC1 Wave Radio System with Accessory CD Changer, Remote and Manuals" is in sale since Wednesday, July 1, 2020. The seller is "materialbliss" and is located in Eugene, Oregon. This item can be shipped to United

States. Comes with Manual for the Wave music System and the CD Changer. Comes with 2 Remotes. One of the remotes is New and unused. <http://tailormade-sales-marketing.com/userfiles/colortrac-m40-manual.xml>

Stereo and changer are in great condition. Well taken care of. Please see all photos. Any Questions please ask. The seller is "heartlandresell" and is located in Zanesville, Ohio. Sounds great, looks great, complete and ready to go. This system is in nice condition. Clean, with light signs of use. Packaging Ships doubleboxed for extra protection. Add your own CD player, TV, and more. Bose AC Power Cord. Owner's manuals for both the Radio and the Pedestal Unit. The Bose awardwinning acoustic wave guide speaker technology produces full, clear stereo sound by guiding air through a labyrinth air chamber. Proprietary circuitry automatically adjusts the tonal balance so that you hear natural sound at all volume levels. This means that you can hear full, realistic bass at all volume levels. The item "Bose Wave Radio AWR1G1, Dual Alarm, BLUETOOTH, REMOTE, PEDESTAL, Manuals" is in sale since Saturday, November 10, 2018. This item can be shipped to United States. It was tested to play the radio and cd's in all slots. The item "BOSE Wave music System III Radio CD player with remote and manuals tan beige" is in sale since Wednesday, August 15, 2018. The seller is "marbonito" and is located in Beaverton, Oregon. This item can be shipped to United States. The item "BOSE Wave music System III Radio CD player with remote and manuals tan beige" is in sale since Thursday, June 28, 2018. This item can be shipped to United States. This item can be shipped to United States. The screen is in great condition. The unit was tested and it works great. The original remote and manuals are included. Please see pictures for more details. The seller is "jazzcatsmeow" and is located in Santa Barbara, California. This item can be shipped to United States. The seller is "thisnthatbst" and is located in Fresno, California. This item can be shipped to United States. White GUARANTY. Laundry tub. in a wet basement. near a swimming pool. or Wider than the other.

Do not change Important Safety Instructions No 70 provides information with respect to proper Refer to the antenna Line Sum —To prevent damage to this product A. the power supply cord or the plug has been B. objects have fallen or liquid has spilled into the O. the product has been exposed to rain or water, or. B. the product does not appear to operate normally or E. the product has been dropped or the cabinet After any service or Be sure that any replacement parts used have the same Antenna grounding. Example of antenna grounding as per National Electrical. Lead In Wire. Antenna. Discharge Unit! WEC summary in. Grounding. Conductors Electric. Service. Electrode System Note to CATV system installer. This reminder is provided to call the CATV system installers The Mount. remote control USA. Information about products that Part 15 of the FCC Rules These limits are designed to provide Installation If this equipment does cause harmful interference Owner's Guide Evaluation Owner's Guide The lightning flash With arrowhead symbol, within an equilateral triangle, is intended to alert The exclamation point within an equilateral triangle, as marked on the system, is intended to A CAUTION To prevent electric shock, match Wide blade of plug to Wide slot. Class 1 laser product. This compact disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the barium Class B emissions limits. This Class B digital apparatus meets all requirements of the Canadian Interference Causing. Equipment Regulations. Batteries. Please dispose of used batteries properly, following any local regulations. Do not incinerate. Additional safety information. See the additional instructions on the Important Safety information page enclosed with this Please read this owner's guide. Please take the time to follow this owner's guide carefully. It will help you set up and operate Save your owner's guide for Lifestyle 50 system. Where to find. Setting Up. Before you begin.

Unpacking the carton. Connecting your system. Connecting your home theater components to the Lifestyle system. Other connections. Connecting the antennas. Connecting power to your system. Setting up the personal music center. Operating Your Lifestyle' 50 System. The personal music center

display. Listening to the radio. Listening to compact discs. Listening to home theater sound. Using the system with external components. Operating a Multiroom System. Connecting additional rooms. Operating more than one room. Cleaning the Lifestyle 50 system. Replacing batteries. Using the personal music center "find me" feature. Troubleshooting. Warranty period. Customer service. Product Introduction. Technical information. Accessories Bose Corporation. For your records. Serial numbers are located on the bottom panels of the personal music center, multiroom personal music center serial number. Multiroom interlaced serial number. CD changer serial number. Acoustic bass module serial number. Dealer name. We suggest you keep your sales slip and warranty card together with this owner's guide. Lifestyle System 3. Thank you for purchasing the Bose Lifestyle 50 system. Years of research bring you this technological innovations that make the Lifestyle 50 system unique. The personal music center is a clear departure from convention it has no cables. Since the Bose Jewel Cube speakers are also far from the conventional. Proprietary Bose technologies. The other elements of the Lifestyle 50 system are designed to be hidden from view. DVD, digital TV, next generation cable boxes and satellite receivers. For all analog formats. as Your Lifestyle 50 system is. DVD, digital TV, and digital cable boxes and satellite receivers. VCRs, stereo TVs, cable boxes and satellite receivers.

Videostage decoding directs stereo information to the surround channels, so the sound of Videostage decoding delivers live great sounding channels, even when the original. These, and numerous other innovations, bring you the Lifestyle 50 system, offering superb. Please take the time to follow this owner's guide carefully. It will help you set up and operate. Save your owner's guide for Dolby Laboratories Licensing Corporation. Lifestyle 50 system. Unpacking the carton. What comes with your Lifestyle 50 system. Carefully unpack your system. Save all packing materials for possible future use. The Note Find the serial numbers on the bottom panels of the personal music center, multiroom personal music center serial number. Then write them on your warranty. WARNING The Acoustic bass module weighs 33 pounds 15 kg. Use good lifting. WARNING To avoid danger of suffocation, keep the plastic bags out of the reach of children. Personal music center. Rubber feet. Acoustic bass module. Rubber feet. Figure 24. Selecting a station to store. Figure 25. Alter storing a station as you can use the PRESETS MENU to set presets. PRESETS is only available in the MENU list. Press the MENU button until PRESETS is displayed. It a number is flashing in the PRESET display indicating that this station has not been preset. Or, select a different station. Select the station you want to preset. Then using the PRESET MENU allows you to do additional preset management, making it easier. Any station can be assigned to more than one preset number. Or, you can reserve different number groups for different types of stations. For easy reference. Erasing a preset station. To erase a preset station. Select the frequency or preset number. In addition, to erase a preset station in locations 1 through 9, you can use quickstore from Note. When all 25 FM or 25 AM preset locations are filled, and you hold down the area. Operating Your. Figure 26. Loading and ejecting a CD. Figure 27. Loading and unloading the CD. Using the CD changer. You can load up to six compact discs at a time.

Loading discs into the CD magazine. Hold the magazine, looking at the side with the arrow. Insert up to six discs, label side up. Note the slot numbers 1 through 6. CAUTION Do not insert more than one disc into any slot. Forcing two discs into one slot. CD changer. Note If a disc is upside down, it does not play. The display shows the disc number. Ejecting discs from the CD magazine. Press the white lever that corresponds to the disc you want to eject. This ejects the disc far. Loading the CD magazine into the CD changer. Open the CD changer door. Insert the CD magazine fully into the CD changer, following the. Ejecting the CD magazine from the CD changer. Press the EJECT button, at the lower left of the magazine slot, to remove the magazine. Eject button. Lifestyle System 25. Operating Your Lifestyle. Figure 28. The CD display. Turning the system on and choosing the CD player. Press the CD button to turn the system on and select the CD player. CD appears in the source display area. It a CD. The CD display provides information in three main areas, each with left and right arrow. Pause a CD PAUSE II and II shows. Pause changes to stop after 10 minutes. Unpause a

CD PAUSE II, PLAY b, STOP I, CD, or OFF. Stop a CD STOP I. After pressing STOP I, the display briefly shows the total time. Go to next track TRACK display right arrow button. Skipping to the next track wraps from the last track back to the first of the current disc. You can skip tracks while paused. Go to beginning of current track TRACK display left arrow button. Go to previous track TRACK display left arrow button twice. In RANDOM mode, skips to previous track played. Skipping back from the first track Play another disc DISC display left or right arrow button. In PLAY mode, selects the next or previous disc; in RANDOM mode, randomly selects Scanning up or down stops at the ends at the disc. You can scan a CD while paused.

Note To prevent excessive wear on the CD mechanism, unattended CD play or random To leave music playing unattended for longer The personal music center display provides the following information about the CD changer Lifestyle so system. To prevent a track from playing, press the OMIT TRACK button. The track is skipped and is Including omitted tracks. Omitted tracks are indicated by OMITTED next to the right TRACK arrow. OMITTED lc INCLUDED. Display showing an omitted Track 8 is Use to cancel. OMITTED OMUTED Display showing omitted lack I D Omit track 8 Linryis 50 system 27. Using the CD OPTIONS MENU. Press the MENU button until CD OPTIONS is displayed. CD options screen while CD is up, EH 8 Wms a "a CD programming repeat options. Random and Nepal modes. Repeat modes allow you to play CDs for 24 hours or until you select STOP I or OFE Press. DONE to accept your settings. By selecting CD LIST first the following random and repeat options play your programmed. CD list the same way they play a disc J" Note. If you select random and repeat modes that cannot be combined REPEAT TRACK Opera ng Your Lifestyle" 50 System. CD Programming You can edit a CD In the CD OPTIONS MENU Figure 31, press EDIT CD LIST to begin creating your CD play. iisl. Flynn 32. Beginning CD programming Ready for first To add The track and disc numbers Figure 33. CLEAR and CLEAR LIST age Repeat selecting disc and track numbers The display offers dashes for the track L flesryfe SO system 29. Opera 9 Your Lifestyle 50 System. Figure 34. Ready to play CD LIST The item number begins ashing PLAY list play. Press the CD LIST button to play your CD list. CD, it is skipped while the list plays. To erase the entire list, press the CLEAR LIST button in the CD OPTIONS MENU, and conrm Lifestyle ta 50 system. Listening to home theater sound Built In Dolby Digital AC3 decoding delivers Dialogue remains locked on screen. Listening to digital sound. Turning the digitli audio source on. Turn on the DVD player, digital TV.

Be sure to load the DVD disc Turning the system on and choosing digital sound. Press AUX on the personal music center to turn your system on to play digital sound. Seiocting listening material. To select material with compatible digital audio bllstreams, look for the terms POM or Dolby. Digital, or the symbols ml or. on DVD Video discs. Your Lifestyle" 50 system cannot. To select surround encoded analog or digital audio material, look for the terms Surround or. Ing a TV broadcast. You can listen to any program material in SURROUND 5 speaker mode, although you may Some monaural and stereo matenals will Even with surround encoded Operating Your Lifestyle 50 System. Speaker Dplions and center and Figure 35. VIDEO 1 with FILM BASS Press the MENU button until SPEAKERS is displayed. The SPEAKERS MENU allows you to Select lny number a! speaker Adjusting center and surround levels. The center and surround adjustments are remembered for the room in which they were used. The levels are factory preset at zero. Use the arrow buttons to adjust the levels. Using film bass for movie soundtracks. While using AUX, VIDEO 1, VIDEO 2, and TAPE, you can select lm bass, an enhanced bass Press FILM BASS to turn You can turn it on for Operating Your Lifestyle" 50 System. Figure 37. The RECORD OUT MENU Follow the instructions on page 15 for connecting components. Turn on your component directly or by using its remote control. Use VOLUME A or V on your Note The Lifestyle 50 system cannot tum a connected component on or off. Turning the system on and selecting the component. Press VIDEO 1, VIDEO 2, AUX, or TAPE on your personal music center to select the desired The appropriate display indicator appears when the system is on and the component is Using a tape recorder with your system. To record on a connected tape deck,

use the MENU button to select RECORD OUT. You canThe signal of the selected source is directed to the. RECORD OUT lacks even it you are not listenan to that source thle recording.

The selected source is displayed in place of the dashes. The dashes reappear if selected for. RECORD OUT, the CD player shuts off after 24 hours. RECORD OUT is shown on the display when a source to which you are listening is also selected. Note If you do not use the RECORD OUT option from the MENU, the source playing is. In a multiroom system, the source in the lowest control When you are ready, set the tape deck to record. **33. Finetuning your system. Figure 38. Bass and treble controls** If desired, you can further finetune your system as described here. Adjusting speaker controls. The Lifestyle 50 system TREBLE and BASS controls are located on the Acoustimass You can also locate the normal setting by feeling when the control settles into the notch at Compensating for room acoustics. The acoustics sound qualities of your room can affect the overall sound quality of any Too much or too little treble. Rooms with too few soundabsorbing furnishings, especially those with bare floors and walls, Rooms with a lot of soundabsorbing furnishings, such as upholstered furniture, wallto wall Moving speakers You can increase treble sound by slightly. Too much or too little bass. You can decrease bass sound by turning down the bass control toward —. To increase bass. Acoustimass module placement affects the amount of bass you hear. Placing the module Moving the module away from the corner Compensating for movie soundtracks. When a movie soundtrack is played in a motion picture theater, its basis restored to the full To perform the same way in your home, your. AUX, or TAPE modes, use the FILM BASS button to select between standard and Im Lifestyle so system. Operating Your Lifestyle 50 System. Adjusting signal levels. This setting allows you to adjust and equalize the signal level of source that are not built—in Press the MENU button until SIGNAL LEVELS is displayed. You can watch it After listening to the Figure 39. Signal levels options while in You can adjust the contrast on the touchscreen.

Hold down the SOURCE button for ve Press the lower arrows to select the contrast level Figure 40. LCD contrast adjustment Adjusting the personal music center beep. You can adjust the sound made by the touchscreen to acknowledge a button press. Hold Use the upper Use the arrow buttons to select between Lo, HI, Figure 41. Beep adjustment display Connecting additional rooms. Follow the placement guidelines for the Bose powered speakers that you plan to connect. Then review your plan for how to connect these speakers to the multiroom interface in your A CAUTION Make sure all components are unplugged from the power outlet before you Connect the audio input cable from your additional powered speakers to the selected ROOM ROOM 8. c, or D on the back of the Interface. J” Note Be sure that each connector is inserted completely into each jack. ROOM jacks on the multiroom Room A, B, C. and D jacks. JN Note. If you connect Bose powered home theater speakers, the system automatically offers Press the FILM BASS button to turn. It on or all, FILM BASS is on when you select VIDEO 1 or 2 or AUX. Since SPEAKER options and FILM BASS do not apply for stereo use, these controls are not Operating a MultiRoom Lifestyle 50 System. Your Lifestyle 50 system is able to control up to four rooms of speakers. These rooms are When you have two or more rooms connected, you can play the same or different sources in Shared source When two or more rooms are listening to the same source, they are sharing Linked rooms When two or more rooms are linked, they function as if they were one room. if Keep in mind that there are limits to using different sources in different rooms. With one tuner, Similarly, with one CD player, the Using the ROOM button. Use the ROOM button to select one or more rooms to control. The display Use the following examples of fourroom systems to understand the sequence of ROOM Example 1 Room A FM on, Rooms 5 and c CD on, Room B off. Button press Display shows.

Starting ill Example Z Rooms A and c FM on, Humt Band D c Don. Starting CL lifestyle so system 37. Operating a MultiRoom Lifestyle 50 System. Using the HOUSE button. Use the HOUSE button to control all connected rooms together. Press HOUSE to see empty Eigun 43. Pressing the HOUSE button with Figure 44. Pressing the HOUSE button and. FM in our room system. J” More Press the

HOUSE button before each different command to apply that command to allThe only MENU items available while in HOUSE mode are CLEAN SCREEN and CD 0. TIONS CD programming. Pressing HOUSE and a source turns all rooms on in this source. The display lls the emptyPressing HOUSE and VOLUME changes the volume oi all rooms that are on. When youThe system adiusts thePressing HOUSE and MUTE mutes all rooms that were on.Any rooms that wereThe individual roomsPressing HOUSE and SLEEP applies the SLEEP mode to all rooms that were on. Pressing HOUSE displays empty boxes for all connected rooms. Pressing SLEEP shows allThe SLEEP tlme selected applies to all the rooms that were on even if they were playingYou can accept this time or Change It for all the rooms. SLEEP, CLEAR, and DONE. Note You can set different sleep times for individual rooms by using the ROOM button toRegardless of how many rooms are on.Canceling HOUSE mode. If you do not press any additional buttons after pressing HOUSE, presslng HOUSE againUnlinklng room. After you have linked the rooms using the HOUSE button or by selecting the group of roomsThis room is now removed from the linked group. Using more than one personal music center. To operate a multimom system, you may want to add personal music centers In the addiTo add a new personal muslc center to your system, follow the setup instructions on page 17. Be sure to Install the batteries and turn it on for the rst time within three feet of the multl—LlfestyfeSa system 39. Cleaning the Llfestyle 50 system. Figun 45. Entering the CLEAN SCREENFigure 45. Handling %. Figure 47.

Cleaning a CDFor information on replacing the personal music center batteries see page 17.

Cleaning the touchscreenPress the MENU button until CLEAN SCREEN is displayed. Press the DISABLE KEYS buttonPress DONE to exit from CLEAN SCREEN or press. MENU to select another menu item. You can use an ammoniafree window cleaner on a soft cloth to wipe the screen.

Handling CDs. Handle discs by their edges to prevent ngerprints and scratmes Figure 46. To remove stains or ngerprints from the surface of a disc. use a soft. lintfree, dry cloth. WipeDo not use anyDo not write on, or attach labels to the surface of the disc. To minimize exposure to dust and dirt, replace discs in their cases after use. Store each discCleaning the CD changer.